




SMART CABLE REPLACEMENT TUTORIAL


NON-SPLIT-KING BASES
OR SELF-INSTAL KIT SPLIT-KING BASES

HARDWARE OVERVIEW

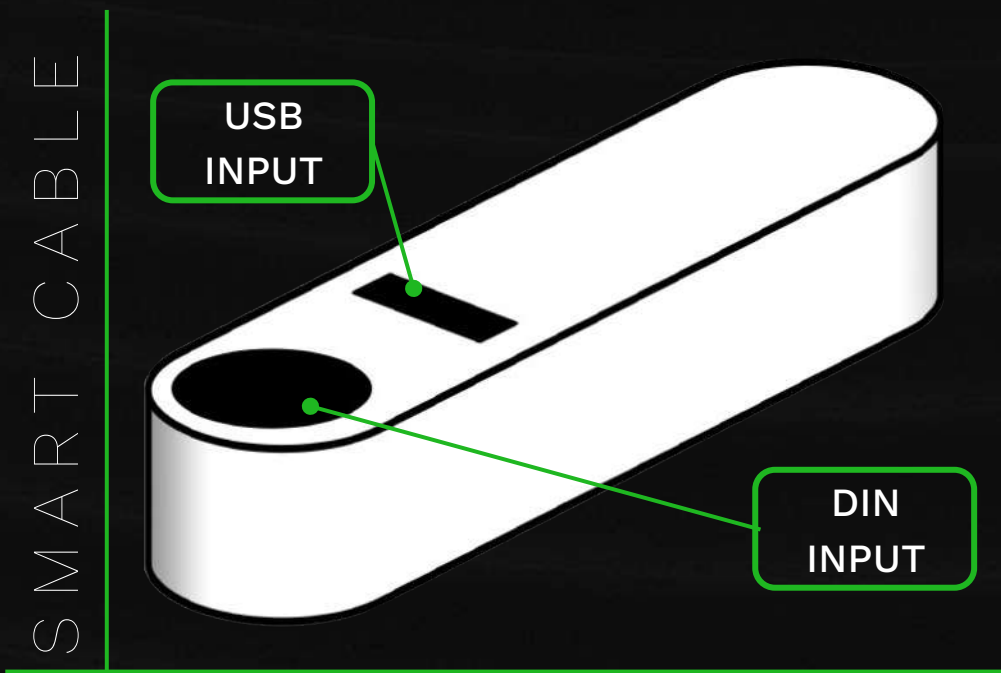

STEP A LOCATE

Your bed should have a Sleeptracker-AI® Smart Cable mounted underneath the base. Locate the Smart Cable on your base.

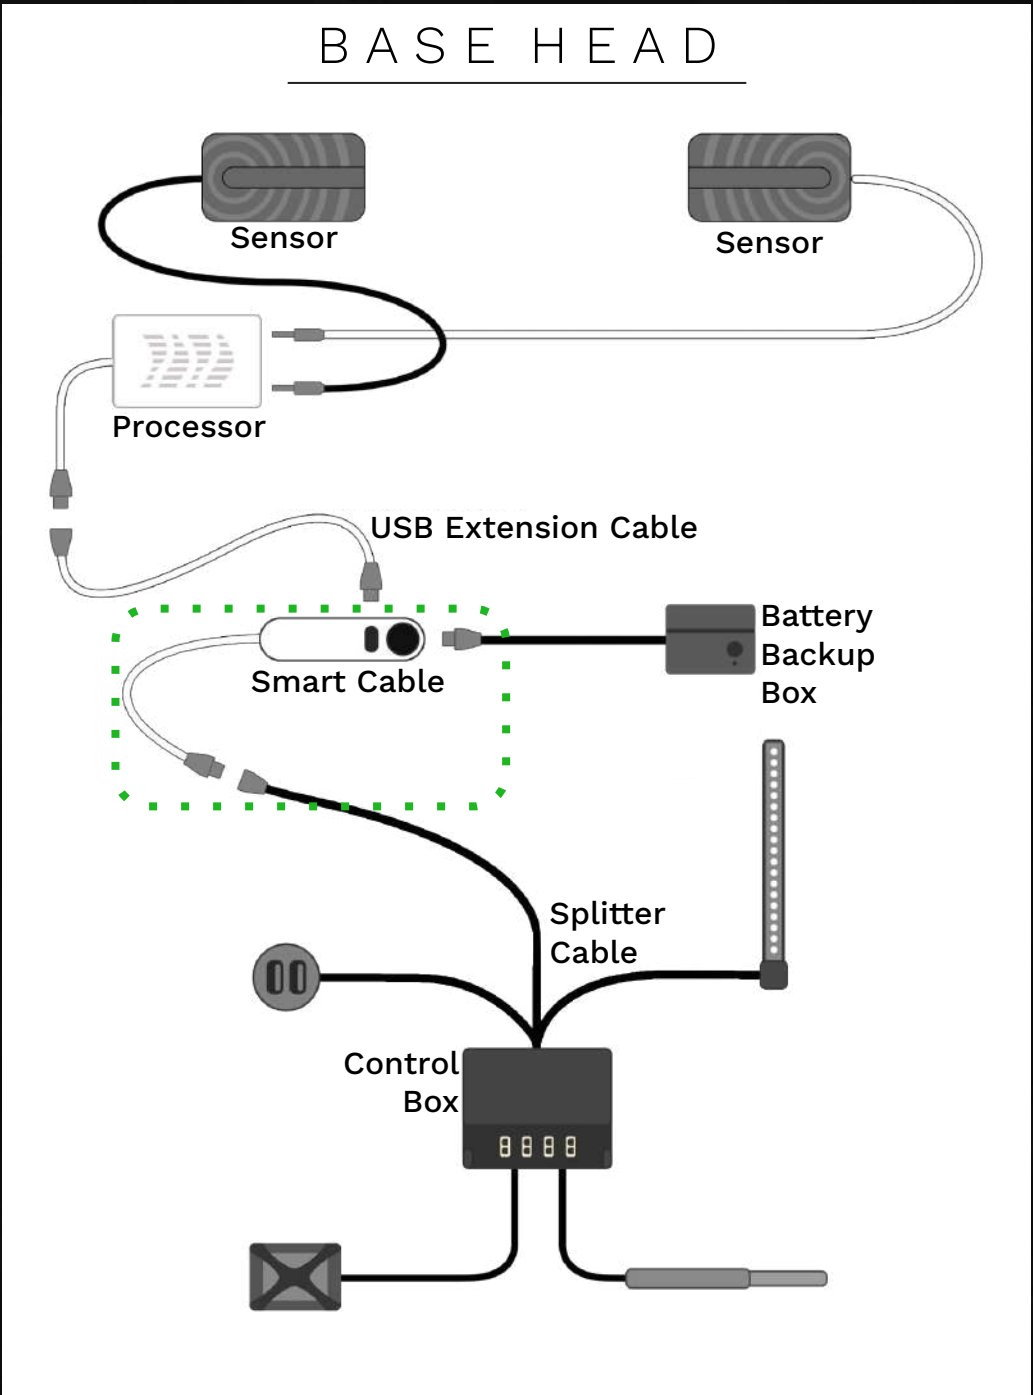

Your bases' configuration may be different, depending on the size and model, however, your base should only have one Smart Cable mounted underneath the base.

STEP


B || REMOVE

Remove the USB cable and the DIN plug (round 5-pin plug) going into the Smart Cable. Next, unplug the Smart Cable’s DIN output from the Control Box’s splitter input, and then remove the Smart Cable body from the mount.

i


The Smart Cable can be removed from the mount by pulling the device out & away from the base/mount.

You **do not** need to remove the screws holding in the mount. You can simply grab the cable coming out of the Smart Cable body, and then pull the Smart Cable body out of the mount.

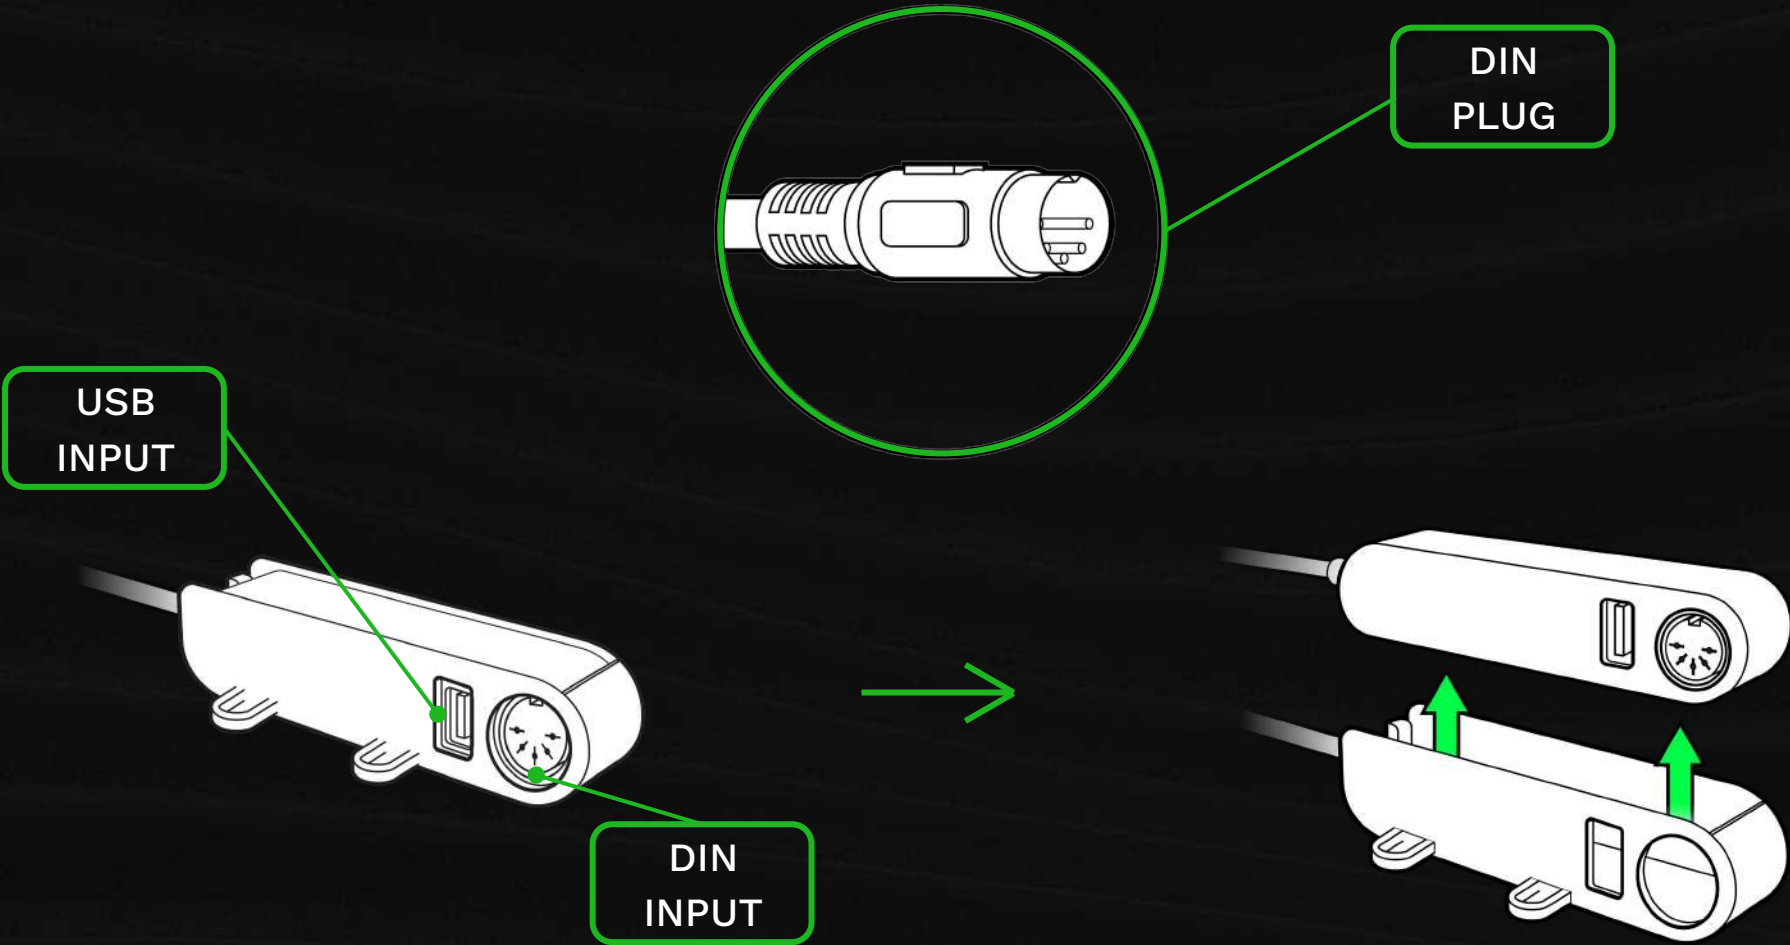

STEP

C || INSTALL

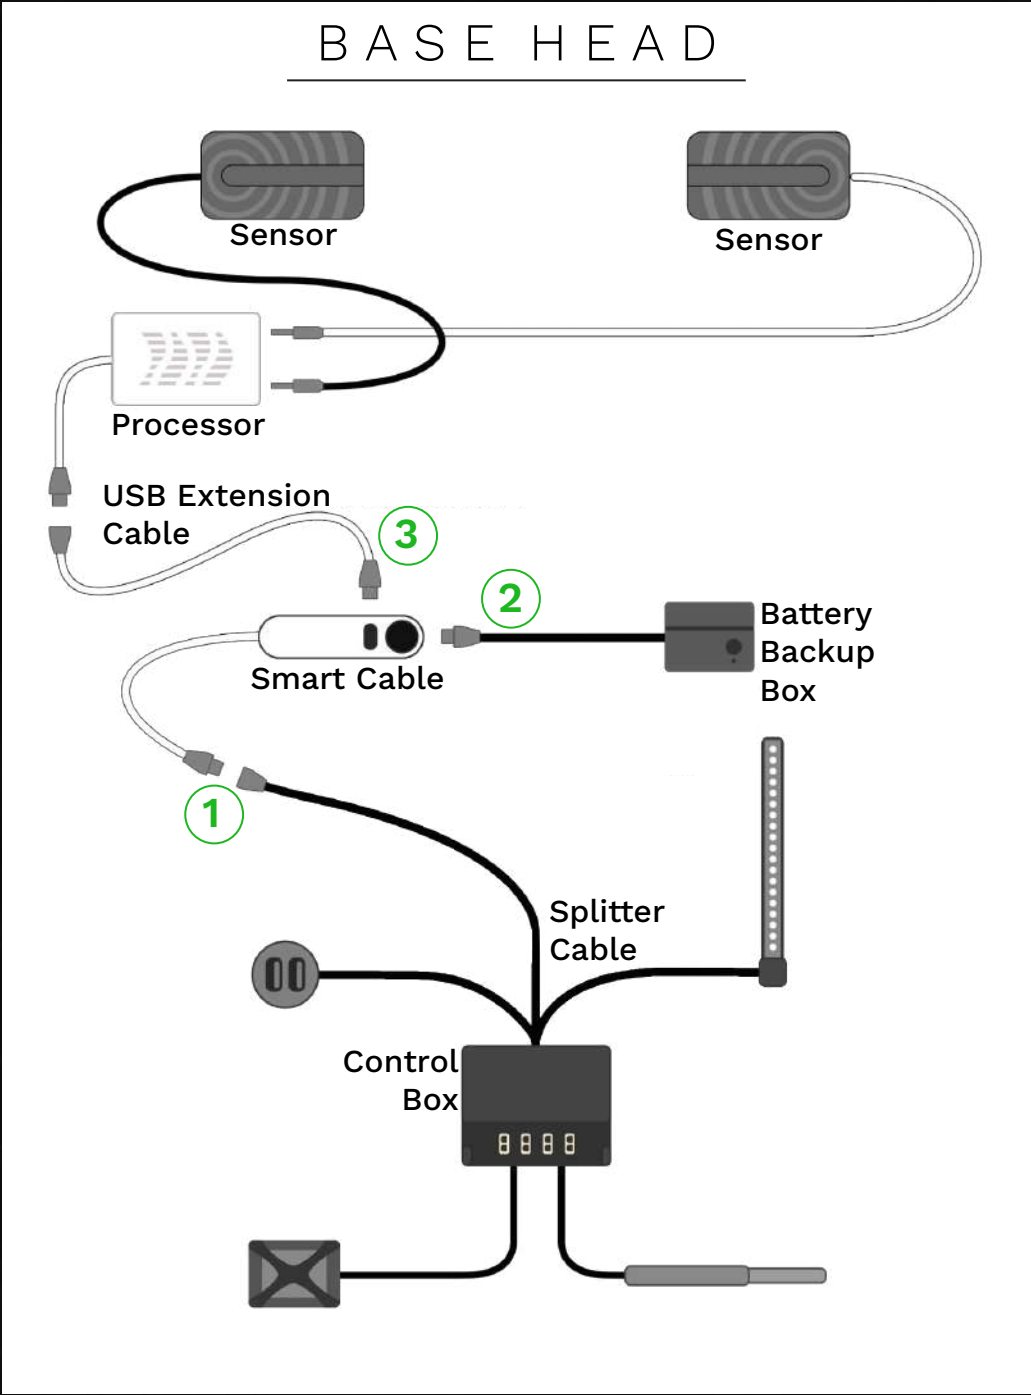

Insert your new Smart Cable into the mount, and then ① firmly push the Smart Cable’s DIN output into the splitter’s DIN input. ② Insert the Battery Backup Boxes’ DIN output into the Smart Cable, and ③ plug the USB cable in.



NOTE

A loose DIN cable connection can cause features on the base to not work properly, so ensure all DIN cable connections you encounter are connected firmly.

STEP


D = REVERIFY

In the Sleeptracker-AI® app, select...

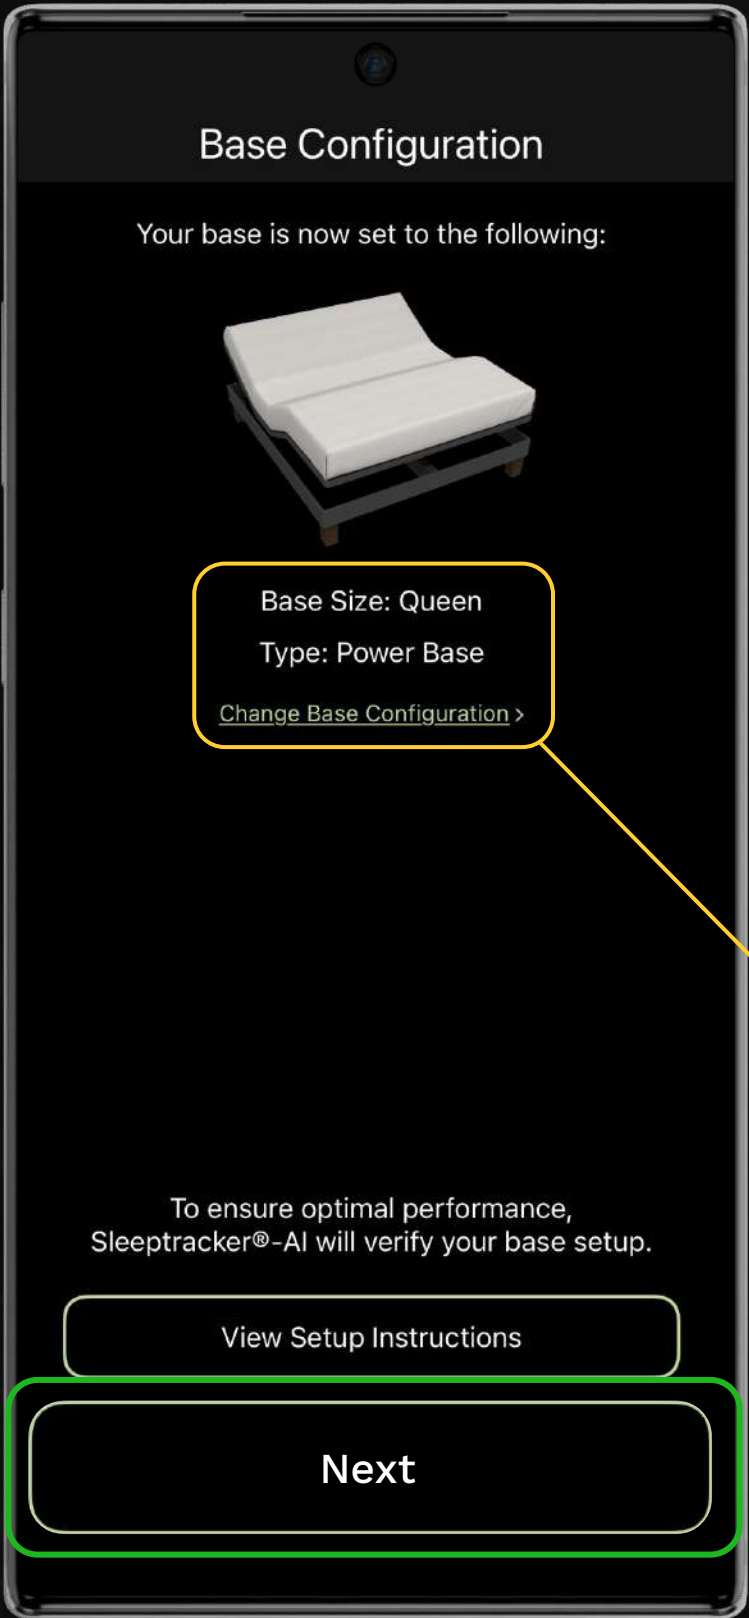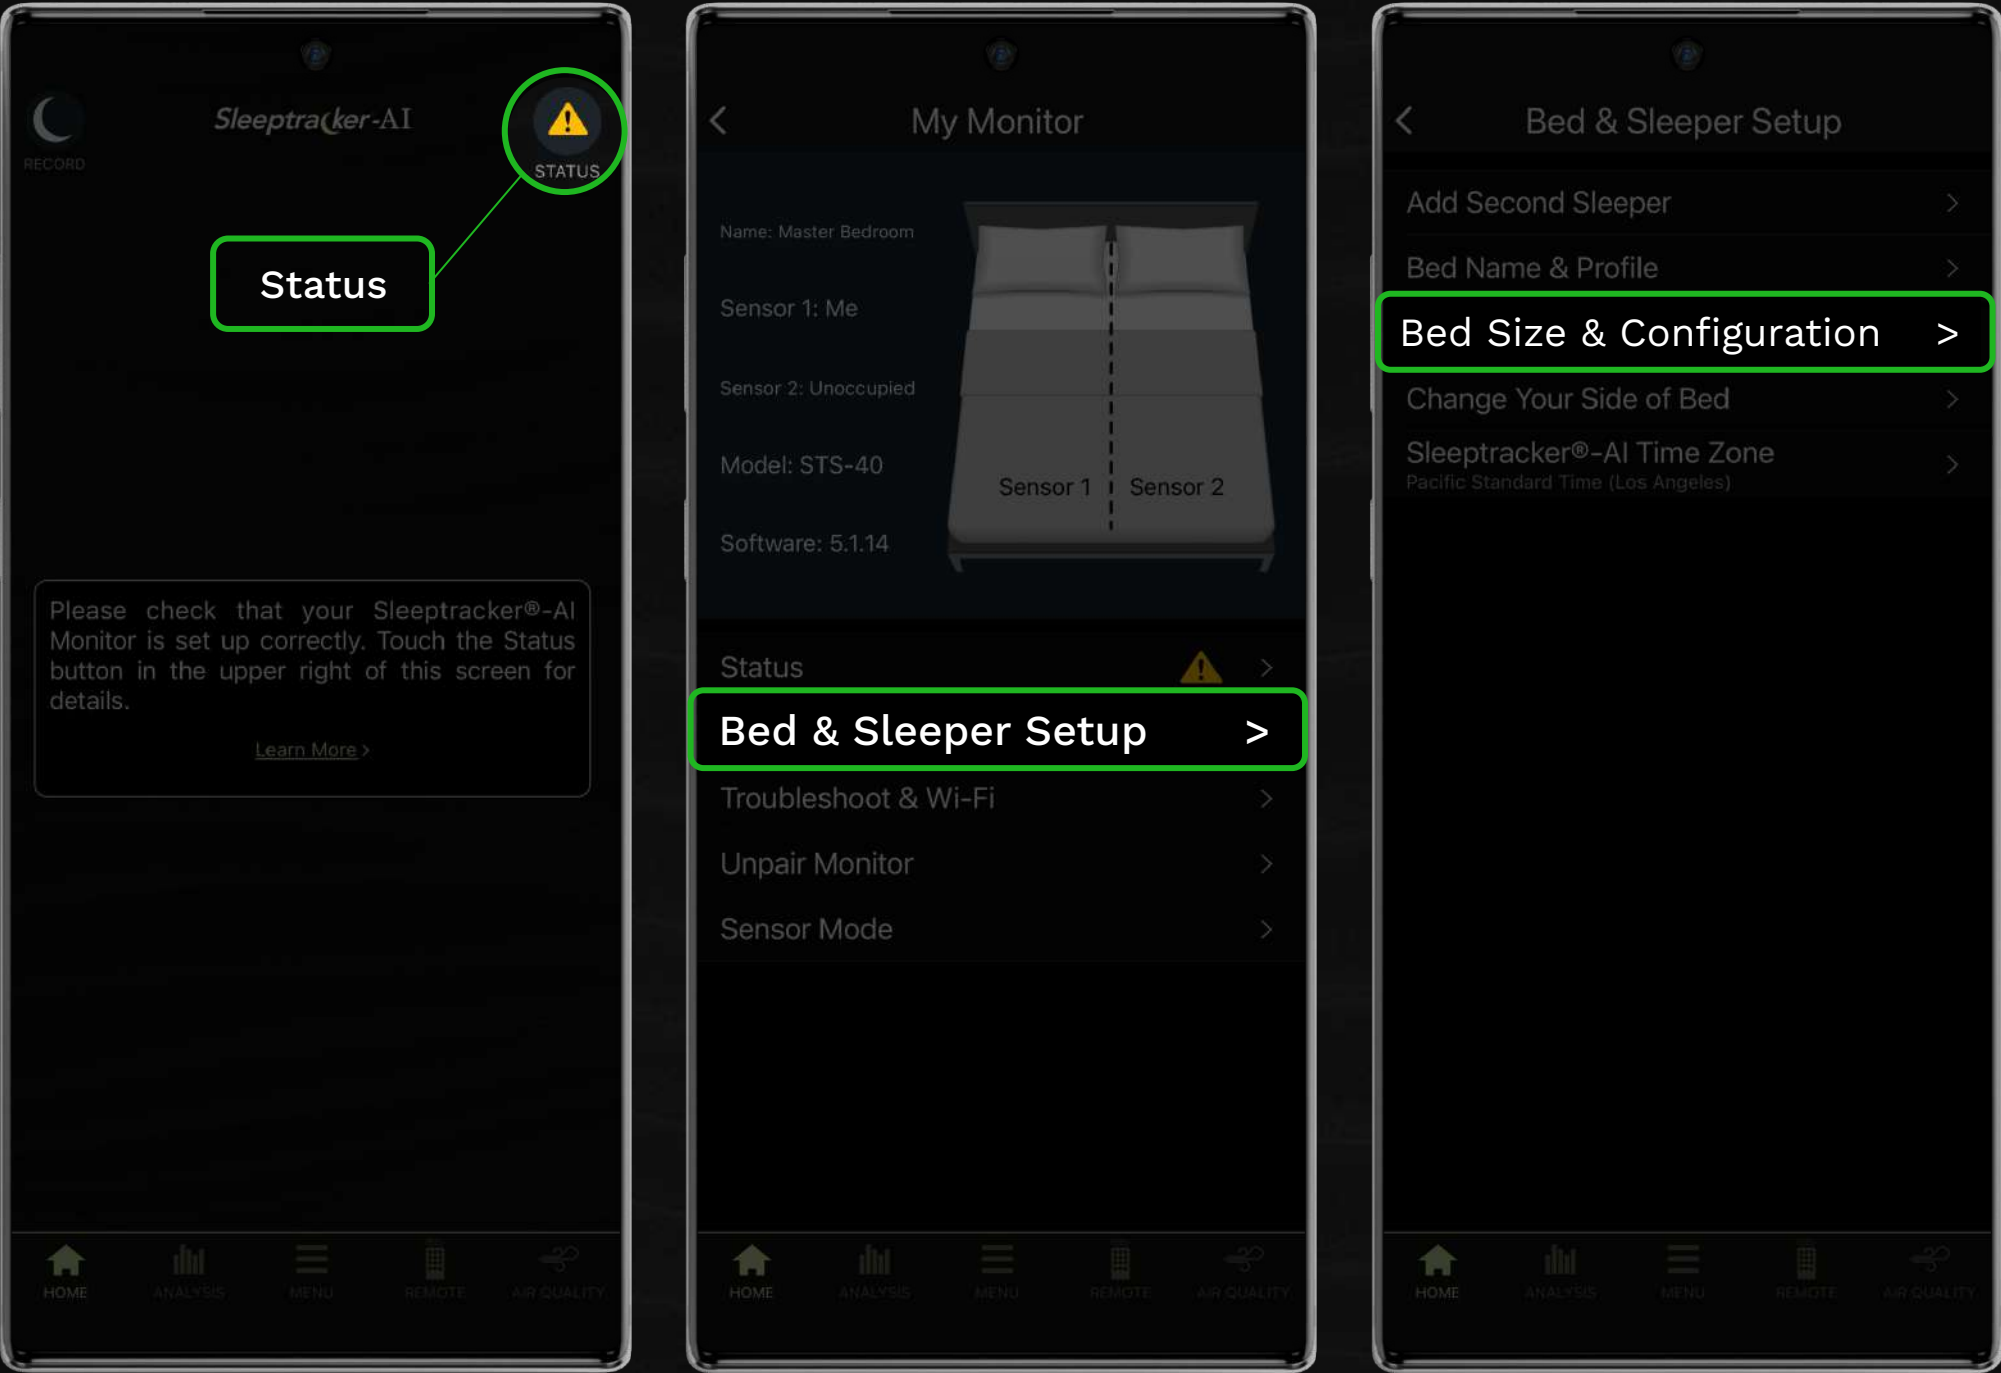


NOTE

If the correct base size is *not* shown and/or the base type is *not* set to “Power Base”, tap **Change Base Configuration** to correct your base’s configuration.

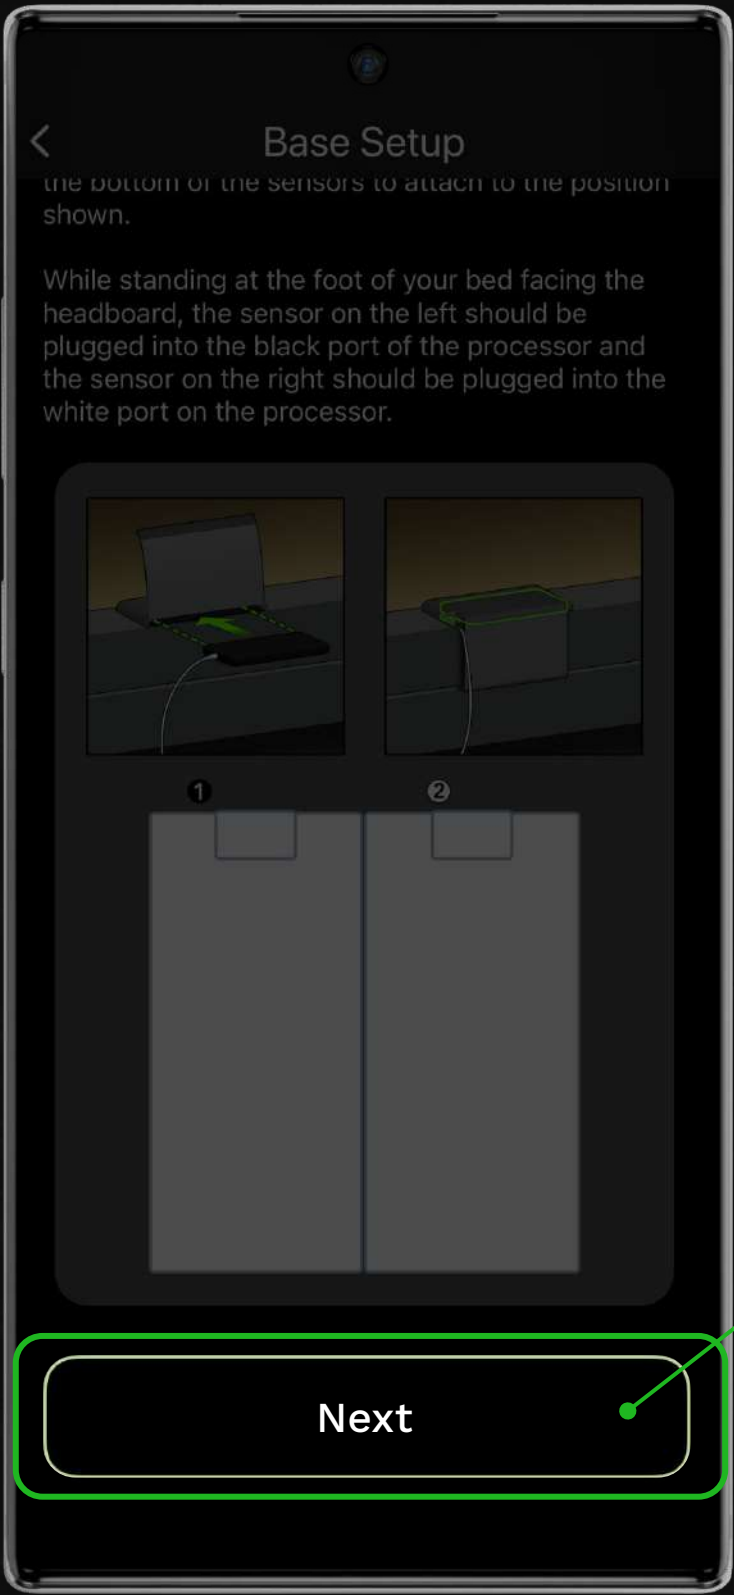

Ensure your sensors are correctly placed on your base, as directed. Afterward, scroll to the bottom of the screen in order to select **Next** & proceed.

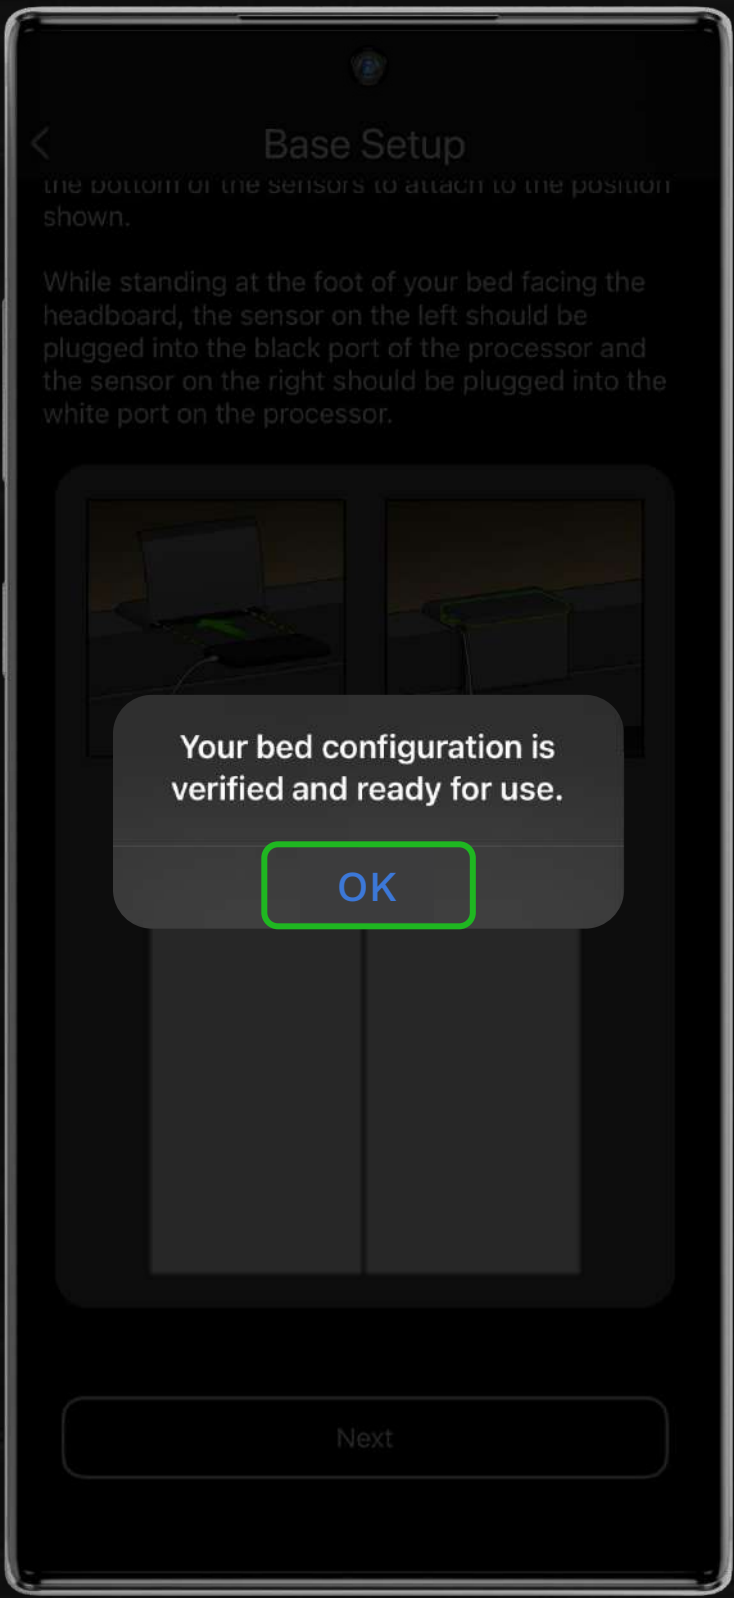

VISIT

SLEEPTRACKER.COM/SUPPORT/
TEMPUR

FOR MORE

INFORMATION